

EN



## User Manual

### WS-2392

**GPS SPORT**  
SMARTWATCH

Thank you for purchasing the **Sami wearable WS-2392 GPS SPORT SMARTWATCH**  
Read the instructions carefully to obtain optimum results and preserve it for future reference.




## CONTENTS.


Wearable, USB magnetic charging cable, instruction manual.

### CHARGING

Connect the device to a computer or laptop with the USB Magnetic cable for charging. Put in contact the magnetic end of the USB cable with the charging points positioned in the back of your device. Kindly use only the USB cable included with the wearable. If you use a power adapter for charging, the output of the power adapter should be 5V, 1A. Charging time: 1-2 hours approx. Please charge the device fully before using it. Take care with the magnet side of the cable, if you connect to the AC and you have contact with a metal surface, you may damage the charging cable

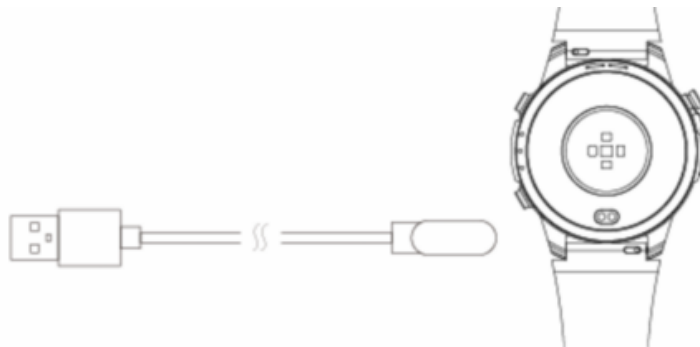

### 1. Product introduction and button definition

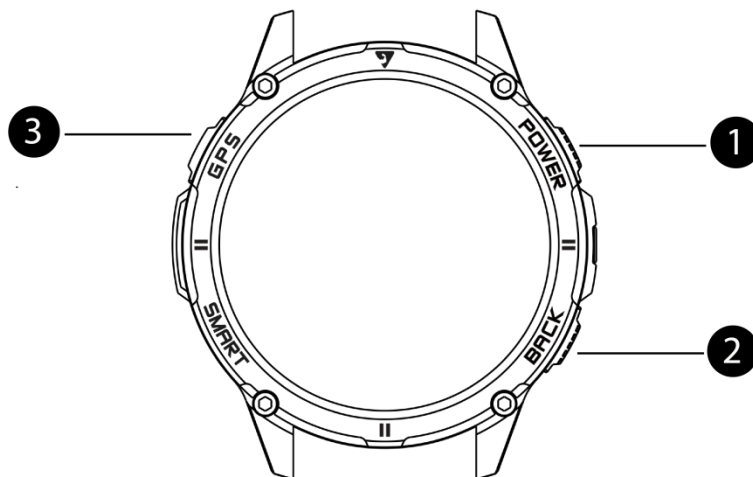

#### Button1 definition:

Power button

Short press: Short press once on the watch face interface to turn off the screen, short press once on the application list interface to return to the watch face interface, short press again to turn off the screen.

Long press for 3 seconds: power on/off, restart, SOS (long press to display the menu selection).

Long press for 8 seconds: force restart the device.

**Button 2 definition:**

Back button/shortcut key:

Short press:

- A. Other pages return to the previous level/customize shortcut functions.
- B. Short press under the screen off to light up the screen.
- C. Pause/continue during exercise.
- D. Short press when a call comes in, mute

Long press for 3 seconds: Turn on the voice assistant/customize the shortcut function.

Supplement: You can choose between the return button/shortcut button. If the shortcut function is not set, short press to return to the previous level, long press the voice assistant, if the shortcut function is set, follow the setting items to implement.

**Button 3 definition(sports button):**

Short press:

- A. Enter the sports mode list.
- B. Short press to light up the screen when the screen is off.
- C. Long press for 3S during sports; stop and end the sports.

**Note:**

Water sports refer to water sports such as swimming, diving, rafting, rowing, sailing, etc. In this mode, to prevent accidental touches by water drops, the touch function will be turned off by default during sports, and button operation will be preferred. You can also control it by unlocking the touch function.

Definition of buttons in water sports mode:

Button 1: Short press to unlock the touch function. After unlocking, if the interface has been flipped down, you can flip the page up through "button 1".

Button 2: Short press to pause the current sports mode. Short press again to continue the current sports and lock the touch screen.

Button 3: Short press to flip down the page, long press to end the sports mode. (If the exercise time is too short, no data will be recorded. When a pop-up window prompts whether to end, short press "button 3" to continue the exercise. Short press "button 2" to exit the exercise.)

## 2. Touch screen control definition


Press the dial on the dial interface for 2-3 seconds to switch the dial, swipe left and right to select the dial and click the selected dial.

**Swipe down:** Swipe down on the dial interface to open the status bar.

**Swipe up:** Swipe up on the dial interface to enter the card shortcut function.

**Swipe left:** Swipe left on the dial interface to enter the main menu interface.

**Swipe right:** Swipe right on the dial interface to enter the notification information interface.

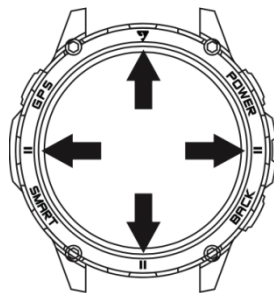

## GETTING STARTED:

### - APP Download

#### 1) How to obtain the BT Connection APP / APK (**GloryFit Pro**)

Search for the **GloryFit Pro APP** in the Play Store for Android devices; download it and install it in your Android smartphone, or go to our **website [www.sami.es](http://www.sami.es)** and download the application.

For Iphone, search **GloryFit Pro** in App Store and download to proceed installation on your device.

#### 2) Installation of the **GloryFit Pro** APP

When installing the **GloryFit Pro** application on your smartphone, you must allow all the Application Permissions, allow this **GloryFit Pro** app auto run.

The first time you run this **GloryFit Pro app**, it will ask you to Enable Notifications, please tap OK and tap the **GloryFit Pro** and confirm OK. You must tap OK/Allow/Pair/Yes/Confirm for any pop-up request. On your smartphone permission management, allow all application permissions.

#### 3) How to make the wearable pair with your smart phone?

\*First, turn on the Bluetooth of your Phone.

\*Second, run the **GloryFit Pro** app on your Phone, on the home page of **GloryFit Pro**, find the pairing request by the setting all your values requested and then select "**watch**". You must have the screen of the watch on and the APP will search for new Bluetooth device(s), when the available Bluetooth device displays, please select **WS-2392** (the BT name of this device). Select the device on the app to make it pair. When you pair for the first time, the **GloryFit Pro** app will ask you to enable GPS and Bluetooth, and authorize **GloryFit Pro** to get access to the location service while using the app. Please accept all the requests for the correct functioning of the device. When you finish select OK/Confirm/Allow for any pop-up request.

**Important:** To enable all notifications of different softwares such as WhatsApp, Facebook, Skype, Twitter, you will need to turn on the notifications on the APP manually. On the **Fitcloud Pro** homepage, select the icon **“Device”** (situated on the right bottom of the screen), → select **“WS-2392”** → select **“message notification”** → turn on **“Allow notification”** and turn on all the APP notifications you want to active.

## 4. GPS USAGE


4.1 In order to get a better experience, please connect to the binding APP when using the GPS function for the first time. Within about 3 minutes after binding, the "GloryFitPro" app will send GPS ephemeris orbit and other data to the watch via Bluetooth in the background. After the ephemeris is successfully sent, the GPS positioning time can be greatly shortened. If it is not sent successfully, the watch will pop up an "AGPS has expired" reminder when you open a sport with GPS function for the first time. AGPS expiration will cause the positioning time to be too long, affecting the positioning experience. You can try to unbind and bind the watch APP again. And wait for 2 minutes before trying to use the GPS function. If APGS is sent successfully, the "AGPS has expired" reminder will not pop up when you open the GPS function for the first time.

4.2 Every morning at 09:00, the "GloryFitPro" app will re-acquire the latest GPS ephemeris data of the day. When the watch is connected to Bluetooth, it will obtain the latest GPS ephemeris data.

4.3 If the GPS positioning time is too long and the GPS track drifts, it is greatly affected by environmental factors. Choosing an open place or away from high-rise buildings will help GPS to quickly locate and reduce track deviation.

4.4 Save the data after the exercise, and the APP will synchronize the exercise data. The exercise track and exercise data can be queried on the APP side.


## 5. GPS USAGE INTERFACE

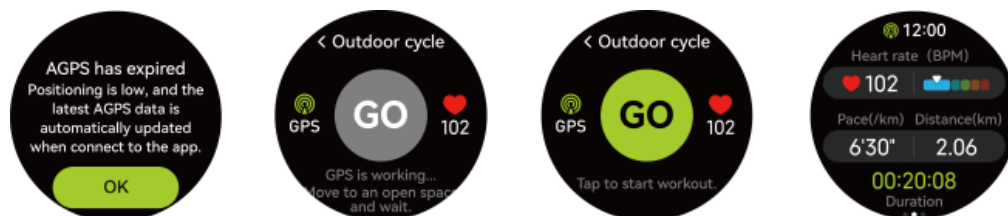

AGPS has expired      No Location      Get Location      Sports with location

During the connection process, a pop-up window will pop up to confirm the pairing connection with the watch and mobile phone. Please click to confirm the pairing.

After the connection is successful, the call icon and data connection icon in the watch status bar will turn green. In gray, it is not connected.

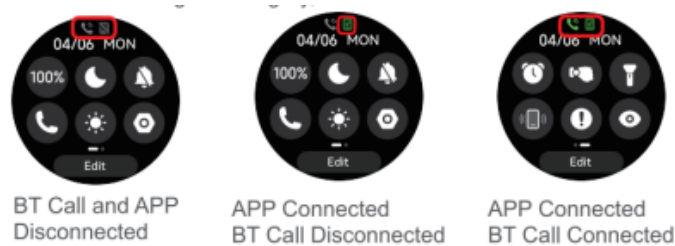

## TECHNICAL SPECIFICATIONS:

**Display screen:** AMOLED screen 1.43". Full colour touch screen

**Screen resolution:** 466x466pixels.

**Internal Memory:** 256mb

**MCU Chipset:** ATS3085L

**Acelleration and gyroscopes:** STK821

**Heart rate sensor:** VC30F

**Barometric Altimeter:** Goerl SPL07-03

**Charge port :** USB magnetic charging cable

**Battery:** Built in Li-Polymer 530mAh

**Stand by time:** 15-20 DAYS

**Working time:** 7-10 DAYS

**Bluetooth:** BLE 5.3

**Water-resist Rating:** 3ATM this device resists 30 meters waterproof (5ATM). Not valid for hot water shower due to vapor.

**Weight:** 85g silicone strap

# Declaration of Conformity

Hereby we,

|                       |                                       |
|-----------------------|---------------------------------------|
| Name of manufacturer: | <u>SANTOSHI SL</u>                    |
| Address:              | <u>CALLE FELIPE ASENJO N.56</u>       |
| Zip code & City:      | <u>28947 - FUENLABRADA ( MADRID )</u> |
| Country:              | <u>SPAIN</u>                          |

**declare that this DoC is issued under our sole responsibility and that this product:**

|                      |                      |
|----------------------|----------------------|
| Product description: | <u>Smart Watch</u>   |
| Type designation(s): | <u>WS-2392</u>       |
| Trademark:           | <u>SAMI WEARABLE</u> |

**is in conformity with the relevant Union harmonization legislation:**

**DIRECTIVE EMC 2014/30/EU**

**DIRECTIVE LVD 2014/35/EU**

**Standard CE (RED): DIRECTIVE 2014/53/EU**

**Standard RoHS: 2011/65/EU: (RoHS) Restriction of Hazardous Substance.**

**with reference to the following standards applied:**

EN 60950-1: 2006+A11:2009+A1:2010+A12:2011+A2:2013

EN 62479:2010

EN 301 489-1 V2.1.1 (2017-02)

EN 301 489-17 V3.1.1 (2017-02)

EN 300 328 V2.1.1 (2016-11)



Signature

Full name: VISHAL MIRPURI

Position: ADMINISTRATOR

Date: 15/11/2024

Contact support: info@sami.es