

# Sami<sup>®</sup>

## WEARABLE

### User Manual

### WS-2373



Thank you for purchasing the **Sami** wearable WS-2373. Read the instructions carefully to obtain optimum results and preserve it for future reference. **Sami** has developed wearable devices since 2015 and we use the best components possible for the product.

## DESCRIPTION OF THE WEARABLE.




## CONTENTS

Wearable, USB Magnetic charging cable, instruction manual.

## CHARGING

Connect the device to a computer or laptop with the USB Magnetic cable for charging. Put in contact the magnetic charging cable with the charging points positioned in the back of your device. Kindly use only the USB cable included with the wearable. If you use a power adapter for charging, the output of the power adapter should be 5V, 1A. Charging time: 1:30 - 2 hours. Please charge the device fully before using it. Take care with the magnet side of the cable, if you connect to the AC and you have contact with a metal surface, you may damage the charging cable.

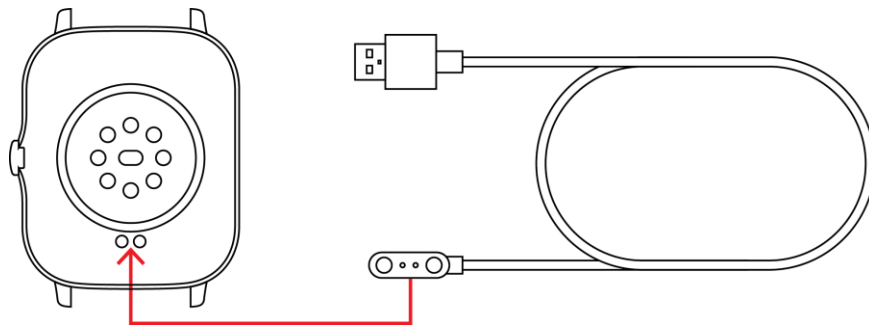

**NOTE:** Do not have the charger connected to AC and the magnets touching any metallic surface, this will create a high heating of the cable and will damage it.

## HOW TO POWER ON / POWER OFF?

- 1) To turn ON the smart band, long press the Power On/Off button for few seconds to make it Power On.
- 2) To turn OFF the smart band, long press the Power On/Off button for few seconds until the Power OFF icon displays, then select "Yes" to make it Power Off; or on the home screen of your smart band, tap and slide from top to bottom to enter in the shortcut menu; tap in the settings icon and scroll down to find the power off icon, tap on it and then select "Yes" to make it Power Off

## HOW TO CONTROL?

- 1) On the display screen (touchscreen), short tap the touchscreen to select; tap and slide left/ right/ up/ down to change between the different menu pages.
- 2) Short press the Power On/Off button to return. Long press the Power On/Off Button to make it Power On/Off.

## GETTING STARTED:

### - For Android

#### 1) How to obtain the BT Connection APK (**DA FIT**)

Search for the **DA FIT APP** in the Play Store; download it and install it in your Android smartphone, or go to our **website [www.sami.es](http://www.sami.es)** and download the application.

#### 2) Installation of the **DA FIT** APK.

When installing the **DA FIT** application on your Android, you must allow all the Application Permissions, allow this **DA FIT** app auto run.

The first time you run this **DA FIT**, it will ask you to Enable Notifications, please tap OK and tap the **DA FIT** and confirm OK. You must tap OK/Allow/Pair/Yes/Confirm for any pop-up request. On your Android permission management, allow all application permissions.

#### 3) How to make the wearable pair with your Android smart phone

\*First, turn on the Bluetooth of your Phone.

\*Second, run the **DA FIT** app on your Phone, on the home page of **DA FIT**, select "**ADD A DEVICE**", the APP will search for new Bluetooth device(s), when the available Bluetooth device displays, please select **WS-2373** (the BT name of this device) to make it pair. The pairing will be finished in a few seconds. When you pair for the first time, the app **DA FIT** will

ask you to fill some personal information such as gender/age/height/weight. When you finish select OK/Confirm/Allow for any pop-up request.

\* Now you can start using your desired functions of the smart band.

**Important:** To enable all notifications of different softwares such as WhatsApp, Facebook, Skype, Twitter, you may need to turn on the notifications on the APP manually. On the **DA FIT** homepage, select the Settings icon (middle icon situated at the bottom of the interface) → then select notifications, → and turn on all the APP notifications you want to active.

## - For iPhone

1) How to obtain the BT Connection APP? (**DA FIT**)

On iPhone, please go to APP Store and search **DA FIT** and install the app.

2) How to make the wearable pair with your iPhone

\*First, turn on the Bluetooth of iPhone

\* Run the **DA FIT** app on the iPhone, on the home page of **DA FIT**, tap “**ADD A DEVICE**” the APP will search for new Bluetooth device(s), when the available Bluetooth device displays, please tap **WS-2373** (the BT name of this device) to make it pair. The pairing will be finished in few seconds. When you pair for the first time, the app **DA FIT** will ask you to fill some personal information such as gender/age/height/weight. When you finish select OK/Confirm/Allow for any pop-up request.

\*Now you can start using your desired functions of the smart band.

**Important:** To enable all notifications of different softwares such as WhatsApp, Facebook, Skype, Twitter, you may need to turn on the notifications on the APP manually. On the **DA FIT**

homepage, select the Settings icon (middle icon situated at the bottom of the interface) → then select notifications, → and turn on all the APP notifications you want to active.

On your phone you must allow the pop up window of **DAFIT** to access your location. This is important for reconnection between the wearable and the phone.

## PRODUCT FEATURES

### BLUETOOTH (V 5.0)

**FULL TOUCH SCREEN.** Capacitive touch screen 1.69"

**BUILT IN VIBRATING MOTOR**

**BUILD IN HEART RATE SENSOR**

**BUILD IN GRAVITY SENSOR**

**GESTURE CONTROL TO LIGHT UP THE DISPLAY SCREEN (Quick View)**



## DISPLAY SCREEN INTERFACE

- 1) Time/Date/Battery
- 2) Steps (Pedometer) – including Steps, Distance, Calories
- 3) Sleep monitor
- 4) Hear Rate - tap to start testing

- 5) Training (Sports) – including Walking/ Running/ Cycling/ Skipping/ Badminton/ Basketball/ Football
- 6) Blood Pressure - tap to start testing
- 7) SpO2 - tap to start testing
- 8) Weather

**NOTE:** If the weather does not appear on the smart device after the Bluetooth pairing, please set your weather city at the **Da Fit APP**, then restart the smart device. The location service on your phone should be activated also.

- 9) Shutter(remote camera)
- 10) Music Player control
- 11)


Data can be sync from the wearable to the smart phone on the **DA FIT** APK/APP. Your smart phone will synchronized when the Bluetooth is paired with this device.

## **\*\*SLIDE FROM UP TO DOWN**





1. BT connection status
2. Vibration on/off
3. Torch
4. Theatre mode
5. Brightness
6. Weather
7. Setting shortcut

## \*\*SLIDE FROM DOWN TO UP

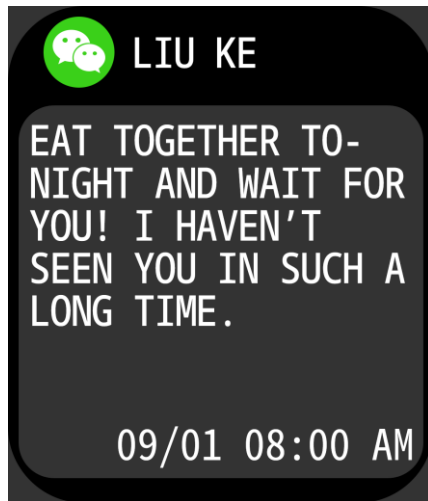

Messages large preview

## \*\*2 DIFFERENT MENÚ STYLES

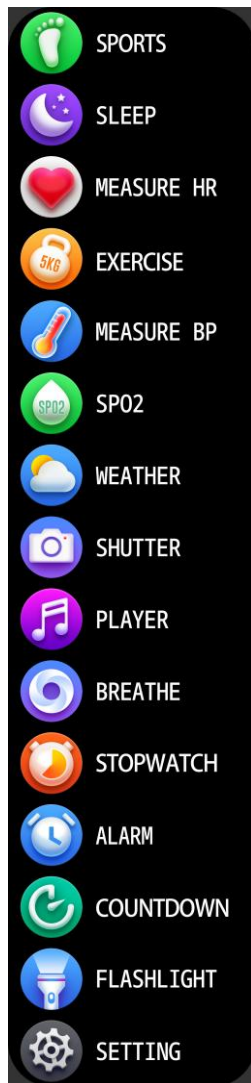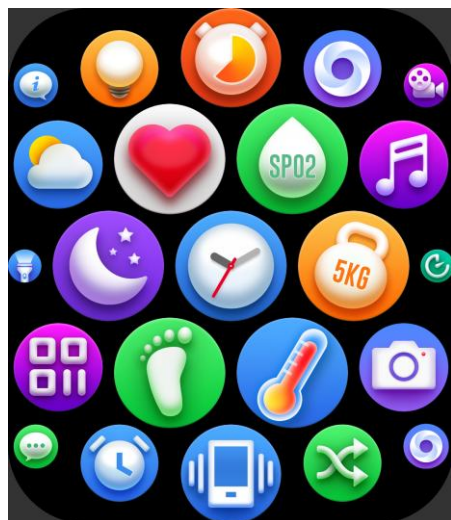

## **FUNCTIONS**

**PHONE CALL NOTIFICATION** - vibrating reminder for incoming phone calls

**MESSAGE NOTIFICATION** - vibrating reminder for incoming messages, including SMS, WhatsApp, Facebook, Twitter, Skype messages, etc.

**CLOCK SCREENS** (Different home digital clocks) –More Clocks can be downloaded at the **DA FIT** APK/APP. You can select a picture from your mobile to set it as your clock screen. In the app go to the Settings menu, select “Watch Dials”, then select de dial number 4, tap on the “edit” icon, tap on “select picture”, and select your desire picture. You should allow the picture settings permissions on your mobile.

**SLEEP MONITOR** - built in.

**ALARM CLOCK** - 3 built in alarm clocks supported on the **DA FIT** APK/APP

**RELAX FUNCTION** - built in

**STOPWATCH**- built in

**TIMER** - built in

**SEDENTARY REMIDER(REMIND TO MOVE)** - supported on the **DA FIT** APK/APP

**FIND THE DEVICE** (Looking for the SMART BAND) - supported on the **DA FIT** APK/APP. Find it at the OTHERS at **Da Fit**.

**GESTURE CONTROL (Quick View)** (Raise your hand to light up the screen. Before using this function, you need to make the adjustment on the smart phone APP)

**GPS MAP TRACE** (view it on the BT APP/APK DA Fit). On the home page of the **Da Fit**, scroll down and select Outdoor running, tap Start, select the Map icon (this icon is on the right bottom of the screen), to view the map. On the home page of the Da Fit, scroll down and select Outdoor running, tap the history record icon(this icon is situated on the right top of the screen) to view the GPS trace history.

**DRINK WATER REMINDER**- supported on the **DA FIT** APK/APP

**GOAL TRACKING**- supported on the **DA FIT** APK/APP



**\*\*\*\* THIS IS NOT A MEDICAL INSTRUMENT, SO THE VALUES ARE APPROXIMATE**

### **CLEANING:**

In order to avoid any damage on the plating or printing of your wearable please do not use any chemical product for cleaning such as alcohol 96°. We recommend you to use a slightly wet cloth.

### **TECHNICAL SPECIFICATIONS:**

**Display screen:** 3D curved full screen capacitive touch screen 1.69".

**Screen resolution:** 240 x 280 pixels.

**Internal Memory:** 64mb ROM

**System:** Nucleus

**CPU:** GR5515

**Charge I/O port :** USB magnetic charging cable

**Battery:** Built in Li-Polymer 190 mAh

**Stand by time:** 10-12 DAYS

**Working time:** 5-8 DAYS

**G-Sensor:** Bosch three-axis gravity sensor

**Health Sensor:** HS3300

**Bluetooth:** v5.0

**Water-resist Rating: IP68** (raindrop resistance. This device is not waterproof; do not drown it into water)

**Weight:** 43 g

# Declaration of Conformity

**Hereby we,**

Name of manufacturer: SANTOSHI SL  
Address: CALLE FELIPE ASENJO N.56  
Zip code & City: 28947 - FUENLABRADA ( MADRID )  
Country: SPAIN

**declare that this DoC is issued under our sole responsibility and that this product:**

Product description: Smart Band  
Type designation(s): WS-2373  
Trademark: SAMI WEARABLE

**is in conformity with the relevant Union harmonization legislation:**

**DIRECTIVE EMC 2014/30/EU**  
**DIRECTIVE LVD 2014/35/EU**

**Standard CE (RED): DIRECTIVE 2014/53/EU**  
**Standard RoHS: 2011/65/EU: (RoHS) Restriction of Hazardous Substance.**

**with reference to the following standards applied:**

EN 60950-1: 2006+A11:2009+A1:2010+A12:2011+A2:2013  
EN 62479:2010  
EN 301 489-1 V2.1.1 (2017-02)  
EN 301 489-17 V3.1.1 (2017-02)  
EN 300 328 V2.1.1 (2016-11)  
\_\_\_\_\_



Signature

Full name: VISHAL MIRPURI

Position: ADMINISTRATOR

Date: 11 / 11 / 2022