

Sami[®]

WEARABLE User Manual WS-2344



Thank you for purchasing the **Sami Wearable** WS-2344. Read the instructions carefully to obtain optimum results and preserve it for future reference. Sami has developed wearable devices since 2015 and we use the best components possible for the product.

DESCRIPTION OF THE WEARABLE




CONTENTS

Wearable, USB Magnetic cable, instruction manual.

CHARGING

Connect the device to a computer or laptop with the USB Magnetic cable for charging. Put in contact the magnetic end of the usb cable with the charging points positioned in the back of your device. Kindly use only the USB cable included with the wearable. If you use a power adapter for charging, the output of the power adapter should be 5V, 1A. Charging time: 2 hours. Please charge the device fully before using it. Take care with the magnet side of the cable, if you connect to the AC and you have contact with a metal surface, you may damage the charging cable.

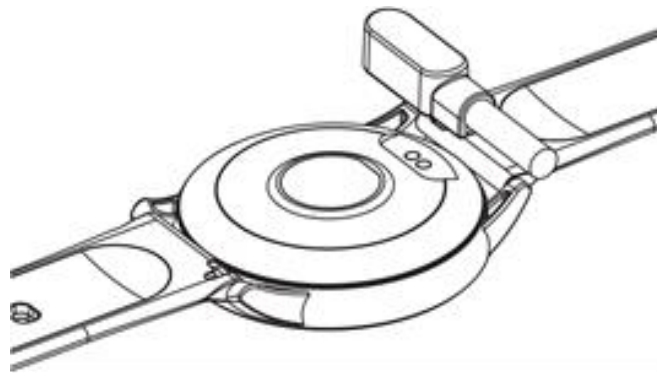

NOTE: Do not have the charger connected to AC and the magnets touching any metallic surface, this will create a high heating of the cable and will damage it.

HOW TO POWER ON / POWER OFF?

- 1) To turn ON the smart band, on the screen, long press the touch button (fixed-point touch control) for a few seconds. The touch button is situated on the bottom of the screen.
- 2) To turn OFF the smart band, in the home screen menu long press the touch control area for a few seconds until the device info displays on the screen, then long press the touch control button again until the power off menu displays. Short tap the touch control button to select power off, then long press the touch button to make it power off. There is another way to power off your smart band: in the home screen menu short press the touch

button until the OTHER(Settings) menu displays, the long press the touch button to enter in the OTHER menu, short press the touch button to select the power off option, and long press again the touch button to make it power off.

HOW TO CONTROL?

On the display screen , short press the touch button to change between the different menus. Long press the touch button to achieve the different functions.

GETTING STARTED:

- For Android

1) How to obtain the BT Connection APK (**DA FIT**)

Search for the **DA FIT APP** in the Play Store; download it and install it in your Android smartphone, or go to our **website www.sami.es** and download the application.

2) Installation of the **DA FIT** APK.

When installing the **DA FIT** application on your Android, you must allow all the Application Permissions, allow this **DA FIT** app auto run.

The first time you run this **DA FIT**, it will ask you to Enable Notifications, please tap OK and tap the **DA FIT** and confirm OK. You must tap OK/Allow/Pair/Yes/Confirm for any pop-up request. On your Android permission management, allow all application permissions.

3) How to make the wearable pair with your Android smart phone?

*First, turn on the Bluetooth of your Phone.

*Second, run the **DA FIT** app on your Phone, on the home page of **DA FIT**, select "**TO ADD**", the APP will search for new Bluetooth device(s), when the available Bluetooth device displays, please select **ZL01 or WS-2344** (the BT name of this device) to make it pair. The pairing will be finished in a few seconds. When you pair for the first time, the app **DA FIT** will ask

you to fill some personal information such as gender/ age/ height/ weight. When you finish select OK/Confirm/Allow for any pop-up request.

* Now you can start using your desired functions of the smart band.

Important: To enable all notifications of different softwares such as WhatsApp, Facebook, Skype, Twitter, you may need to turn on the notifications on the APP manually. On the **DA FIT** homepage, select the Settings icon (middle icon situated at the bottom of the interface) → then select notifications, → and turn on all the APP notifications you want to active.

For Android smart phone, in order to achieve all of the functions which are supported by the **DA FIT** app, you must allow the **DA FIT** app runs in background, you must tap OK/Confirm/Allow/Yes for any of the pop-up request at the 1st time of running of the **DA FIT** APK/APP. And it may ask you to turn on the **DA FIT** app in the Android smart phone's Accessibility: go to the settings of the smartphone → Accessibility → find the **DA FIT** app and turn it on.

- For iPhone

1) How to obtain the BT Connection APP? (**DA FIT**)

On iPhone, please go to APP Store and search **DA FIT** and install the app.

2) How to make the wearable pair with your iPhone?

*First, turn on the Bluetooth of iPhone

* Run the **DA FIT** app on the iPhone, on the home page of **DA FIT**, tap "**ADD A DEVICE**" the APP will search for new Bluetooth device(s), when the available Bluetooth device displays, please tap **ZL01 or WS-2344** (the BT name of this device) to make it pair. The pairing will be finished in few seconds. When you pair for the first time, the app **DA FIT** will ask you to fill some

personal information such as gender/age/height/weight. When you finish select OK/Confirm/Allow for any pop-up request.

* Now you can start using your desired functions of the smart band.

Important: To enable all notifications of different softwares such as WhatsApp, Facebook, Skype, Twitter, you may need to turn on the notifications on the APP manually. On the **DA FIT** homepage, select the Settings icon (middle icon situated at the bottom of the interface) → then select notifications, → and turn on all the APP notifications you want to active.

ATTENTION: In IOS and in Android your wearable should be connected through the app and not with the Bluetooth menu of your phone. If you have paired it on the Bluetooth menu, unpair it and forget the device to start the correct binding through the app.

PRODUCT FEATURES

BLUETOOTH (V 4.0)

TOUCH BUTTON (Fixed-point touch control). This model is not FULL touch control.

TOUCH SCREEN. touch screen 1.3"

BUILT IN VIBRATING MOTOR

BUILD IN HEART RATE SENSOR

BUILD IN GRAVITY SENSOR

GESTURE CONTROL TO LIGHT UP THE DISPLAY SCREEN

DISPLAY SCREEN INTERFACE



- 1) Time/Date/Steps/Calories/Battery displaying
 - 2) Steps/Distance/Calories (Pedometer)
 - 3) Sleep monitor
 - 4) Heart rate monitor
 - 5) Training (sports mode) - Walking/ Running/ Cycling/ Skipping/ Badminton/ Basketball/ Football
 - 6) Blood pressure test
 - 7) Blood Oxygen (SPO2) test
 - 8) Weather - It will be displayed only after your smart band is successfully paired with your mobile phone.
- NOTE:** The weather icon may not appear if your smart phone's network (WIFI/Data Connection) is not in good connection.
- 9) Messages
 - 10) Remote camera
 - 11) Player (music control)
 - 12) Other -Stopwatch/Mute/Reset/Power Off/Brightness adjustment
 - 13) Different clock screens – Change them at the **DA FIT** APK/APP.
 - 14) Alarm Clock – Set it at the **DA FIT** APK/APP.
 - 15) Find device – Support at the **DA FIT** APK/APP.
 - 16) Sedentary reminder - Support at the **DA FIT** APK/APP.

Data can be sync from the wearable to the smart phone on the **DA FIT** APK/APP.

Your smart phone will synchronize when the Bluetooth is paired with this device.

FUNCTIONS

PHONE CALL NOTIFICATION - vibrating reminder for incoming phone calls

MESSAGE NOTIFICATION - vibrating reminder for incoming messages, including SMS, WhatsApp, Facebook, Twitter, Skype messages, etc.

CLOCK SCREENS (Different home digital clocks) - supported on the **DA FIT** APK/APP

ALARM CLOCK - supported on the **DA FIT** APK/APP

SEDENTARY REMIDER(INACTIVITY REMINDER/ REMIND TO MOVE) - supported on the **DA FIT** APK/APP

FIND THE DEVICE (Looking for the SMART BAND) - supported on the **DA FIT** APK/APP

GESTURE CONTROL (Raise your hand to light up the screen. Before using this function, you need to make the adjustment on the smart phone APP)

GPS MAP TRACE (view it on the BT APP/APK **DA Fit**). On the home page of the **Da Fit**, scroll down and select Outdoor running, tap Start, select the Map icon (this icon is on the right bottom of the screen), to view the map. On the home page of the **Da Fit**, scroll down and select Outdoor running, tap the history record icon(this icon is situated on the right top of the screen) to view the GPS trace history.

MULTIPLE LANGUAGES - supported on the **DA FIT** APK/APP

GOAL TRACKING- supported on the **DA FIT** APK/APP

****** THIS IS NOT A MEDICAL INSTRUMENT, SO THE VALUES ARE APPROXIMATE**

CLEANING:

In order to avoid any damage on the plating or printing of your wearable please do not use any chemical product for cleaning such as alcohol 96°. We recommend you to use a slightly wet cloth.

TECHNICAL SPECIFICATIONS:

Display screen: Fixed-point capacitive touch screen 1.3".

Screen resolution: 240x240 pixels.

Internal Memory: RAM 128KB, ROM 1024KB

System: Nucleus

CPU: HS6620

Charge I/O port : USB magnetic charging cable

Battery: Built in Li-Polymer 200 mAh

Stand by time: 10~15 DAYS

Working time: 5 DAYS

Bluetooth: 4.0.

Water-resist Rating: IP67 (this device resists raindrops, it's not water proof)

Weight: 36 g

Declaration of Conformity

Hereby we,

Name of manufacturer: SANTOSHI SL
Address: CALLE FELIPE ASENJO N.56
Zip code & City: 28947 - FUENLABRADA (MADRID)
Country: SPAIN

declare that this DoC is issued under our sole responsibility and that this product:

Product description: Smart Band
Type designation(s): WS-2344
Trademark: SAMI WEARABLE

is in conformity with the relevant Union harmonization legislation:

DIRECTIVE EMC 2014/30/EU
DIRECTIVE LVD 2014/35/EU

Standard CE (RED): DIRECTIVE 2014/53/EU
Standard RoHS: 2011/65/EU: (RoHS) Restriction of Hazardous Substance.

with reference to the following standards applied:

EN 60950-1: 2006+A11:2009+A1:2010+A12:2011+A2:2013
EN 62479:2010
EN 301 489-1 V2.1.1 (2017-02)
EN 301 489-17 V3.1.1 (2017-02)
EN 300 328 V2.1.1 (2016-11)



Signature

Full name: VISHAL MIRPURI

Position: ADMINISTRATOR

Date: 08/ 07 / 2020