



User Manual WS-2390



Thank you for purchasing the **Sami** wearable WS-2390. Read the instructions carefully to obtain optimum results and preserve it for future reference.

DESCRIPTION OF THE WEARABLE.



CONTENTS.

Wearable, USB magnetic charging cable, instruction manual.

CHARGING.

Connect the device to a computer or laptop with the USB Magnetic cable for charging. Put in contact the magnetic end of the USB cable with the charging points positioned in the back of your device. Kindly use only the USB cable included with the wearable. If you use a power adapter for charging, the output of the power adapter should be 5V, 1A. Charging time: **1-2** hours approx. Please charge the device fully before using it. Take care with the magnet side of the cable, if you connect to the AC and you have contact with a metal surface, you may damage the charging cable.

HOW TO POWER ON / POWER OFF?

- 1) To turn ON the smart band, long press the side button for a few seconds. The side button is situated in the right of the of the screen.
- 2) To turn OFF the smart band, long press the side button for a few seconds. The side button is situated in the right of the of the screen.

1.1 GETTING STARTED:

- APP Download

1) How to obtain the BT Connection APP / APK (**Fitcloud Pro**)

Search for the **Fitcloud Pro APP** in the Play Store for Android devices; download it and install it in your Android smartphone, or go to our **website www.sami.es** and download the application. For Iphone, search for Fitcloud Pro in App Store and download to proceed installation on your device.

2) Installation of the **Fitcloud Pro** APP

When installing the **Fitcloud Pro** application on your smartphone, you must allow all the Application Permissions, allow this **Fitcloud Pro** app auto run.

The first time you run this **Fitcloud Pro app**, it will ask you to Enable Notifications, please tap OK and tap the **Fitcloud Pro** and confirm OK. You must tap OK/Allow/Pair/Yes/Confirm for any pop-up request. On your smartphone permission management, allow all application permissions.

3) How to make the wearable pair with your smart phone?

*First, turn on the Bluetooth of your Phone.

*Second, run the **Fitcloud Pro** app on your Phone, on the home page of **Fitcloud Pro**, find the pairing request by the setting all your values requested and then select **"watch"**. You must have the screen of the watch on and the APP will search for new Bluetooth device(s), when the available Bluetooth device displays, please select **WS-2390** (the BT name of this device). Select the device on the app to make it pair. Select **"confirm tick" ✓ on the watch** and the pairing will be finished in a few seconds. When you pair for the first time, the **Fitcloud Pro** app will ask you to o enable GPS and Bluetooth, and authorize **Fitcloud Pro** to get access to the location service while using the app. Please accept all the requests for the correct functioning of the device. When you finish select OK/Confirm/Allow for any pop-up request.

Important: To enable all notifications of different softwares such as WhatsApp, Facebook, Skype, Twitter, you will need to turn on the notifications on the APP manually. On the **Fitcloud Pro** homepage, select the icon **"Device"** (situated on the right bottom of the screen), → select **"WS-2390"** → select **"message notification"** → turn on **"Allow notification"** and turn on all the APP notifications you want to active.

PRODUCT FEATURES

BLUETOOTH (BLE 5.0)

BLUETOOTH CALLING FUNCTION

TOUCH SCREEN. TFT LCD 1.85" full touch 360 x 360 pixels

BUILT IN VIBRATING MOTOR

BUILT IN HEART RATE SENSOR



BUILT IN GRAVITY SENSOR

GESTURE CONTROL TO LIGHT UP THE DISPLAY SCREEN

BUILT IN TORCH

WATER PROOF 3 ATM

2.1.1 Menu interface, short press the button twice to switch the different menu styles

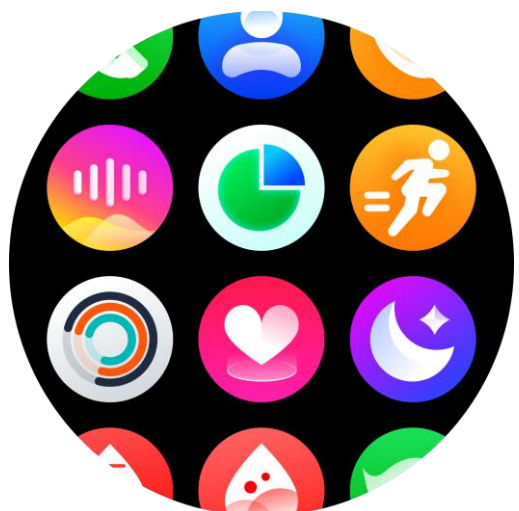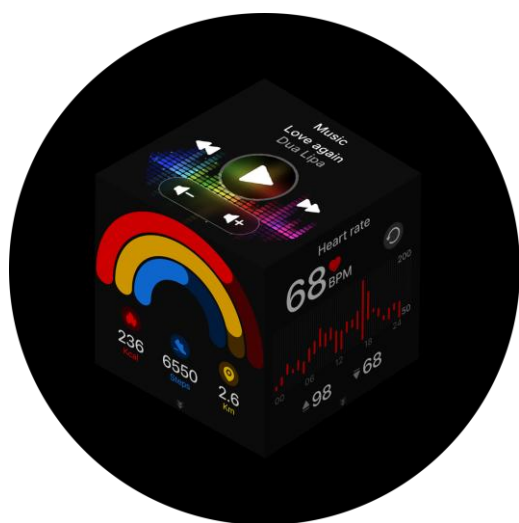





2.2 Function menu

2.2.1 Steps counter

2.2.2 Heart rate detection


2.2.3 Sleep tracker(21:30 PM to 12:00 AM)

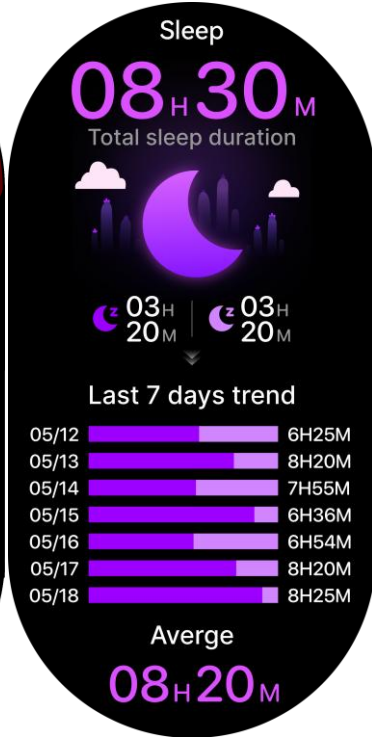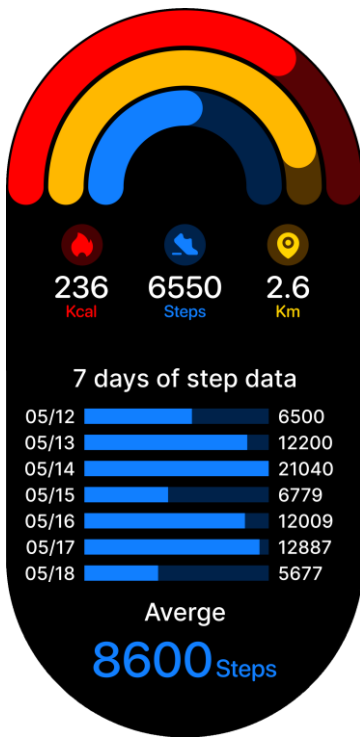

2.2.4 Weather



2.2.5 Music control

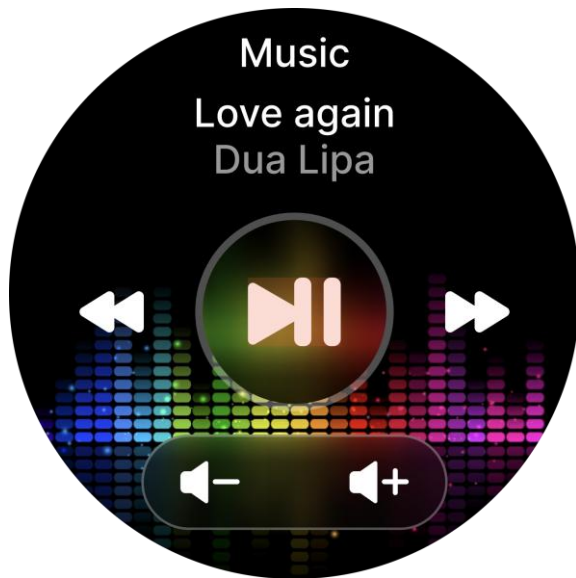

2.2.6 Message Notification

The smart notification function of the smart watch relies on the notification bar of the mobile phone to work, please make sure you have allowed all permissions and the FitCloudPro App is running in the background

3.Functions on FitCloudPro App

3.1 Data sync

All the measured data from smart watch will be sync on FitCloudProApp automatically (including steps, sleep, heart rate, blood oxygen, training)

3.2 Watch faces

Over 100 watch faces for choosing, you cloud downloaded and custom watch face on FitCloudPro App

3.3 Notifications

Turn on the switch to sync related information to smartwatch

(Phone, Messages, Facebook, Twitter, WhatsApp, WeChat, Instagram, Skype, Kakao Talk, Line, Others)

TECHNICAL SPECIFICATIONS:

Display screen: TFT LCD screen 1.85". Full colour touch screen

Screen resolution: 360x360pixels.

Internal Memory: 128mb

MCU: Realtek 8773 EWE-VP(2.5D Watch Face)

Speaker: 1306

Acceleration and gyroscopes: STK8321 (sitronix-sensortek)

Heart rate sensor: HX3918

Charge I/O port : USB magnetic charging cable

Battery: Built in Li-Polymer 730mAh

Stand by time: 40-45 DAYS

Working time: 6-10 DAYS

Bluetooth: BLE 5.0

Water-resist Rating: 3ATM this device resists 30 meters waterproof (3ATM). Not valid for hot water shower due to vapor.

Weight: 80g

Declaration of Conformity

Hereby we,

Name of manufacturer: SANTOSHI SL
Address: CALLE FELIPE ASENJO N.56
Zip code & City: 28947 - FUENLABRADA (MADRID)
Country: SPAIN

declare that this DoC is issued under our sole responsibility and that this product:

Product description: Smart Watch
Type designation(s): WS-2390
Trademark: SAMI WEARABLE

is in conformity with the relevant Union harmonization legislation:

DIRECTIVE EMC 2014/30/EU

DIRECTIVE LVD 2014/35/EU

Standard CE (RED): DIRECTIVE 2014/53/EU

Standard RoHS: 2011/65/EU: (RoHS) Restriction of Hazardous Substance.

with reference to the following standards applied:

EN 60950-1: 2006+A11:2009+A1:2010+A12:2011+A2:2013

EN 62479:2010

EN 301 489-1 V2.1.1 (2017-02)

EN 301 489-17 V3.1.1 (2017-02)

EN 300 328 V2.1.1 (2016-11)



Signature

Full name: VISHAL MIRPURI

Position: ADMINISTRATOR

Date: 19/06/2024